

# LogTag<sup>®</sup>

## REMOTE PROBE TEMPERATURE RECORDER

*Remote Probe Temperature Recorder /  
Data logger with 30 Day summary display*

### TRED30-7



## PRODUCT SPECIFICATION

Doc Ver 1.0 Released : 16<sup>th</sup> June 2011

© Copyright 2011, LogTag Recorders Limited

## Contents

Contents .....	2
Document Revision History .....	2
Overview .....	3
Display Overview .....	4
Real time clock .....	6
Starting the recorder .....	7
Date and Time Starting.....	8
Clearing an alarm .....	10
Stopping the recorder .....	13
Resetting the recorder back to <i>Ready</i> state .....	14
Paused function .....	15
Power save mode .....	16
Hibernation .....	18
Total summary days collected .....	19
Specifications.....	20
<i>LogTag</i> <sup>®</sup> Remote Probe Options .....	21

## Document Revision History

Ver	Date	Author	Details
1.0	14/06/11	MJ/CW	First release.

## Overview

The *LogTag*<sup>®</sup> TRED30-7 Remote Probe temperature recorder features a data logging memory storing up to 7770 temperature readings and a separate rolling 30 day statistical max/min reading and duration memory.

During recording the display shows the current temperature (of the most recent reading), the status (within or outside the acceptance range), an alarm trigger summary of up to the last 30 days (today and 29 days previous) of recording, the current time and battery status.


If a reading is outside the pre-set "Alarm" limits an alarm is generated and a "day alarm indicator" appears on the display.

This display arrangement is designed to show 'at a glance' if temperature excursions have occurred for both the current reading and up to 30 days in the past. Details of any excursions can be checked directly by inspecting the statistics history on the recorder's display or in more detail by downloading the logged data.

Logged temperature data can be downloaded via a standard *LogTag*<sup>®</sup> Interface to the free companion software *LogTag Analyzer* which provides facilities for displaying data in chart, table or statistical formats and allows electronic archiving, export or transmission of the data in support of sophisticated data management systems.

A number of Remote Probe options are available ST100x-xx (see page 21,22).

## Button Actions Overview

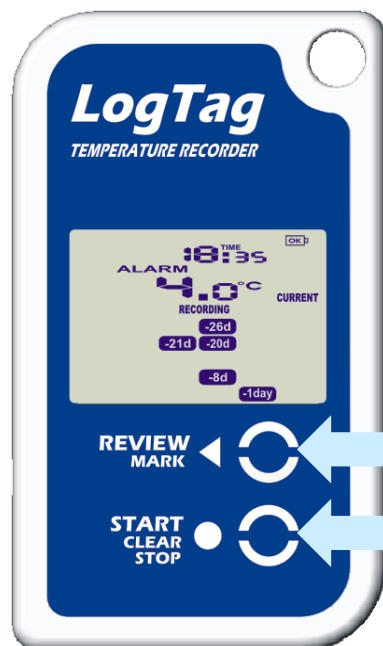

### Review/Mark button

Press to enter REVIEW mode and then press again to advance through the day statistics.  
This action also places an inspection mark in the log if recording is active


### Start/Clear/Stop button

Press to start recording  
Press to clear alarm (if function enabled)  
Press to Stop recording (if function enabled)  
Press to exit day summary review.

Start/Stop/Clear button functions require the button to be pressed continuously for 4 seconds and then released when the related flashing indicator stops flashing. This reduces the possibility of vibration or a load being placed on the recorder that causes permanent or intermittent button press to falsely trigger a function.

Review mode is exited immediately by pressing the STOP button.

# Display Overview

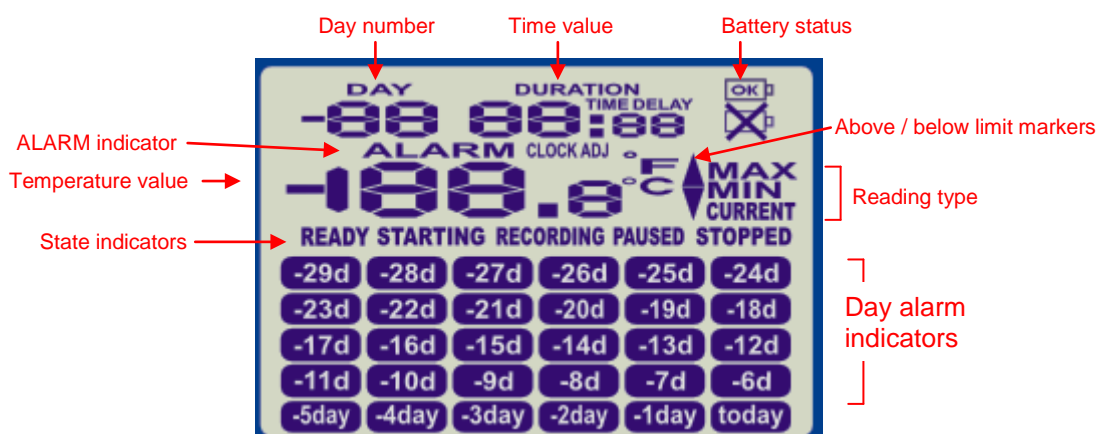

Display item	Description										
Temperature value	Temperature value (in °C or °F)										
Reading type	<p><b>CURRENT</b> = the temperature of the last reading taken</p> <p><b>MAX</b> = The maximum reading in a given 24hour period</p> <p><b>MIN</b> = The minimum reading in a given 24hour period</p>										
Above/below limit indicators	<p>▲ Up arrow marker appears when the temperature displayed is above the specified upper temperature limit</p> <p>▼ Down arrow marker appears when the temperature displayed is below the specified lower temperature limit</p>										
ALARM indicator	<b>ALARM</b> appears when an alarm is triggered.										
Time value	<p>The time (in HH:MM) can be current time, time remaining to start of a delayed start or duration of a given max or min value above/below the specified limits.</p> <p>The value displayed is indicated by the following :-</p> <p><b>TIME</b> = displaying Current Time (READY and RECORDING modes).</p> <p><b>TIME DELAY</b> = displaying remaining time to recording start when a DELAYED START time has been configured (STARTING mode)</p> <p><b>DURATION</b> = displaying duration of a given MAX or MIN statistic above/below the limits in a given day. (REVIEW mode)</p>										
Battery status	<p>Performs battery test hourly.</p> <p> displayed when battery is tested OK.</p> <p> displayed when battery is tested LOW.</p>										
State indicators	<table border="1"> <tr> <td><b>READY</b></td> <td>Ready to start recording</td> </tr> <tr> <td><b>STARTING</b></td> <td>Preparing to start recording. If a delayed start is configured then displays time remaining to recording start.</td> </tr> <tr> <td><b>RECORDING</b></td> <td>Recording</td> </tr> <tr> <td><b>PAUSED</b></td> <td>Max/Min statistics collection paused due to button press activity</td> </tr> <tr> <td><b>STOPPED</b></td> <td>Recording has stopped</td> </tr> </table>	<b>READY</b>	Ready to start recording	<b>STARTING</b>	Preparing to start recording. If a delayed start is configured then displays time remaining to recording start.	<b>RECORDING</b>	Recording	<b>PAUSED</b>	Max/Min statistics collection paused due to button press activity	<b>STOPPED</b>	Recording has stopped
<b>READY</b>	Ready to start recording										
<b>STARTING</b>	Preparing to start recording. If a delayed start is configured then displays time remaining to recording start.										
<b>RECORDING</b>	Recording										
<b>PAUSED</b>	Max/Min statistics collection paused due to button press activity										
<b>STOPPED</b>	Recording has stopped										
Day alarm indicators	The display is organized with a table of 'day alarm indicator' segments named "Today" to "-29d" which are switched on when a given day has an alarm trigger present.										
Day number	The day number of the currently selected day statistic is displayed when in Review mode. TODAY is DAY 0, yesterday is day '-1'. Can be configured to display the total number of days collected while recording.										

## Alarm triggering and function.

A visual alarm trigger is displayed if one or more of the configured alarm trigger conditions have been met. An alarm trigger condition can be a single violation reading (a reading above the upper or below the lower threshold value), a set of consecutive violation readings or a total of violation readings encountered (called 'accumulative').

The alarm triggering structure within the recorder supports many different alarm trigger configurations..

For example, a possible alarm trigger configuration could be :-

- High Trigger when temperature is 10°C or greater for an accumulative time of 10 hours.
- Low Trigger when temperature is -0.5°C or below for continuous 1 hour.

This is configured in using *LogTag Analyzer* as shown below :-

The screenshot displays the configuration interface for the LogTag Analyzer. It includes the following settings:

- Record a reading every: 10 Minutes
- Begin recording after a delay of: 30 Minutes
- Trigger alarm when readings above: 10 °C (Beeper: )
- After: 60 Accumulative violation readings (10 Hours)
- Trigger alarm when readings below: -0.5 °C (Beeper: )
- After: 6 Consecutive violation readings (1 Hour)

**Note:** Accumulative or consecutive alarms automatically retrigger after the configured delay if the temperature remains in violation.

## Real time clock

The time shown on the recording display is linked to the recorder's internal real time clock. A *day change* occurs when the display time rolls through midnight (i.e 00:00) and this is the main function of the display clock.


The display clock value is set to the current time (or timezone) when the recorder is configured with *LogTag Analyzer* and can be also directly adjusted using button actions. (see *Adjusting the display clock*)

Note however that the recorder's internal real time clock value is only updated when the recorder is configured with *LogTag Analyzer*. This prevents the data logging becoming discontinuous with changes to the real time clock.

*LogTag Analyzer* can display the data logged readings with the following time stamp options:-

- UTC (GMT)
- UTC + configuration time zone
- UTC + download timezone
- UTC + display clock timezone (default)

## Starting the recorder

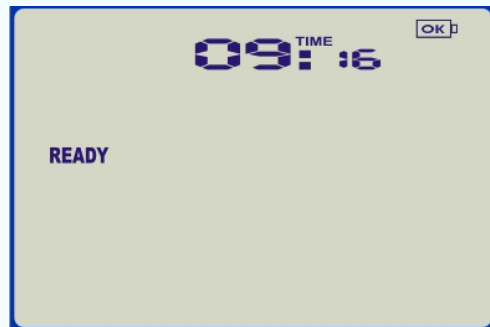


### Recorder in *READY* mode

The recorder must be in Ready mode for it to be started.  
In Ready mode the recorder displays the time, battery status and the READY icon.




Press and hold the Start button and observe that the STARTING icon starts flashing.

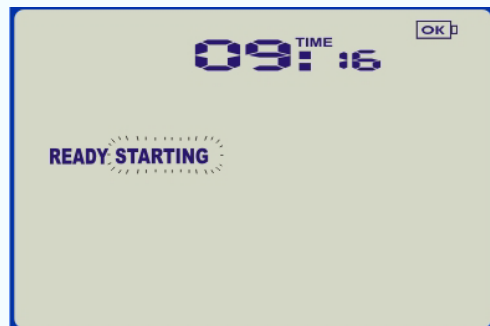


The button needs to be held down until the flashing stops (normally 4-6 seconds however can be longer if the button is not continuously depressed)



Release the Start button when the STARTING icon stops flashing

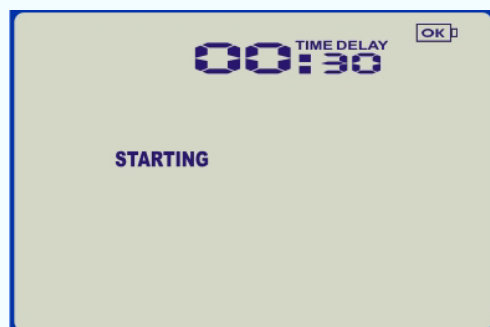

The recorder enters STARTING mode.  
If a *start delay* has been configured then the TIME DELAY to recording commencement is shown.

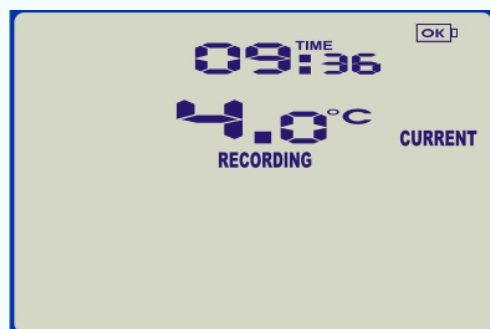

After the start delay has timed out (if configured) then the recorder enters RECORDING mode.  
If no start delay is configured then immediately proceeds to RECORDING.


The display shows the current temperature, current time, battery status and any alarm triggers and is updated each time a log is taken.

## Date and Time Starting


The recorder can be set to start recording on a specific date and time from within *LogTag Analyzer*.

Date/Time Starting mode is enabled or disabled via *LogTag Analyzer* software configuration function *Configure TRED* - dialogue.

Select 'Date/Time start' from the drop down menu then select the Date and Time you wish the recorder to start on.



The recorder will display the following once 'Date/Time Starting' has been enabled :-

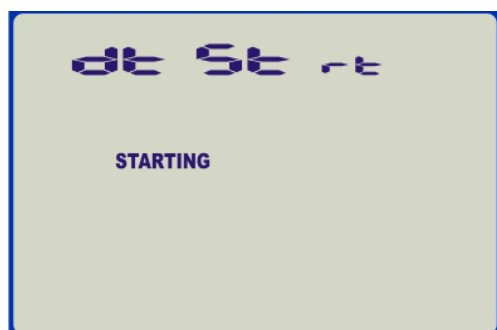

### Note

Placing the recorder into Hibernate mode using *LogTag Analyzer* will disable the Date/Time start function.




## Recording Display

The normal *recording* mode display displays the current temperature *of the last log taken* so is updated at the same rate as the logging interval.

The current time, battery status and alarm trigger day summary are displayed.

Some recording display examples are shown below :-

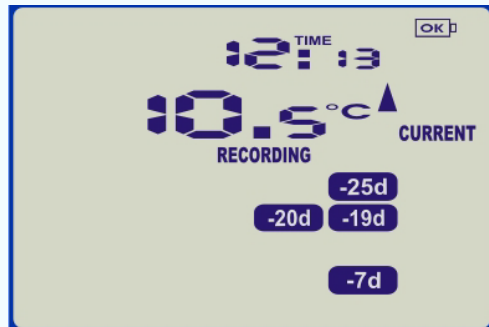


The recorder shows alarm triggers 7, 19, 20 & 25 days ago.

The current temperature is over the upper limit (as indicated by the up arrow) but the duration of this temperature excursion has not yet triggered an alarm.



20 Minutes later

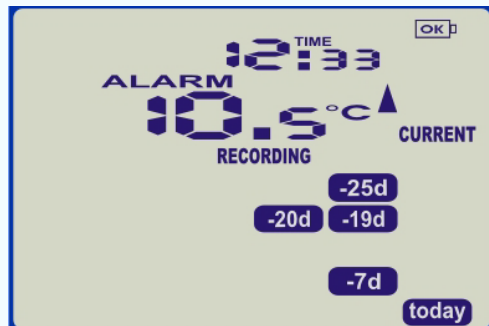


The temperature excursion has triggered an alarm.

The **ALARM** symbol is shown and the **today** marker day alarm indicator is shown.




12 hours later

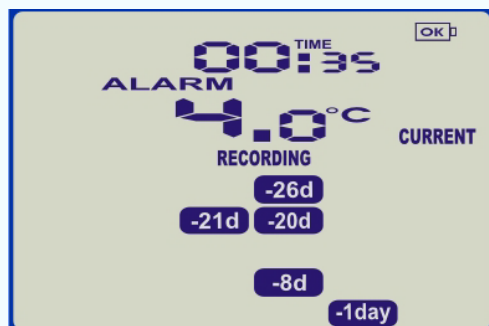

The temperature has returned to the acceptable range but the alarm remains present. (i.e has not been inspected and cleared)

The day summary has shifted by 1 day as the display time has gone through midnight (00:00).

## Clearing an alarm

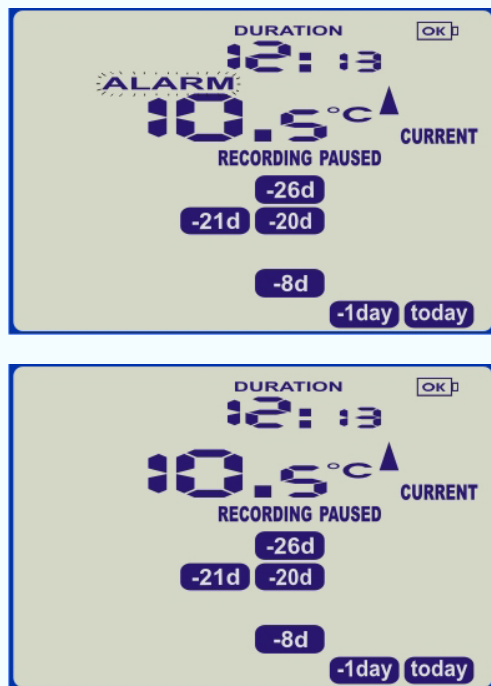

Press and hold the START/CLEAR/STOP button.

The ALARM icon will flash.

Wait until the flashing to stop then release the button within 2 seconds to clear the flagged alarm.


Note that for this function to operate it needs to be enabled in the *Configure TRED - Advanced Options* configure dialogue.

Clear and reset alarm when STOP/Clear button pressed


### Note

Only the **ALARM** icon can be cleared, the day alarm icons remain as they are part of the statistic summary.

## Reviewing day statistics

The Review of day statistics history is accessed by pressing the REVIEW button  and is accessible in RECORDING and STOPPED modes.

An example of a reviewing days statistics is shown below :-

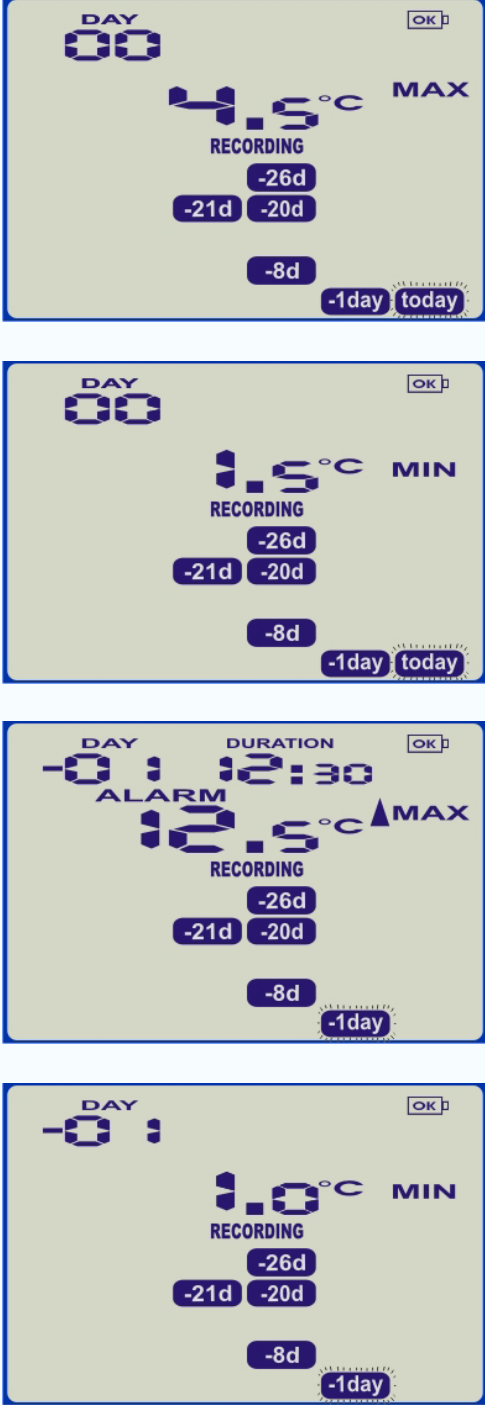

The sequence of screens is as follows:

- Screen 1:** DAY 00, 4.5°C MAX, RECORDING, -26d, -21d, -20d, -8d, -1day today. A blue arrow points to the right.
- Screen 2:** DAY 00, 1.5°C MIN, RECORDING, -26d, -21d, -20d, -8d, -1day today. A blue arrow points to the right.
- Screen 3:** DAY -01, DURATION 12:30, ALARM, 12.5°C MAX, RECORDING, -26d, -21d, -20d, -8d, -1day. A blue arrow points to the right.
- Screen 4:** DAY -01, 1.0°C MIN, RECORDING, -26d, -21d, -20d, -8d, -1day. A blue arrow points to the right.

**Pressing Review button displays current day's max statistic.**

The "Today" segment flashes and 'Day 00' is shown to indicate the 'Today' selection. In this screen example the selected day (Today) does not have any recordings that are outside the acceptance range.


**Pressing Review button again displays the day's minimum statistic.**

**Pressing the Review button again displays the next previous day's max statistic.**

In this screen example the selected day has recordings that are above the upper limit and the duration value shows the amount of time recorded above the limit. The max statistic is above the upper limit so the up arrow is shown and an alarm was triggered by this statistic as indicated by the ALARM text shown.

**Pressing the Review button again displays the day's minimum statistic.**


The min statistic is not below the lower limit and did not trigger an alarm.

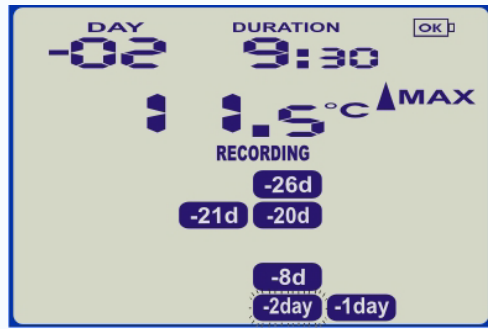

Pressing the *Review* button again displays the next previous day's max statistics.

The “-2day” day marker flashes and DAY ‘-02’ is displayed.


In this screen example the selected day does have recordings that are above the upper limit however did not exceed the alarm trigger durations so only the up arrow is shown and no ALARM trigger has occurred

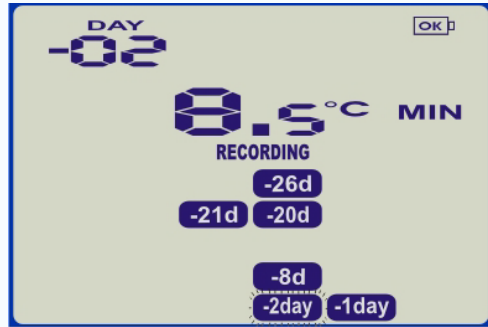

Pressing the *Review* button again displays the day's minimum statistic.

Each time the **Review** button is pressed the cursor advances to the next previous day.

If less than 30 days of recordings have been collected so far then the day marker only advances as far as there is data available after which the next press rolls the summary back to the statistic for Today

Pressing the  button at any time reverts the display back to the *normal* mode.


The display will revert back to normal mode after 30 seconds of no button activity.


### Note

1. If exposure to alarm temperatures occurs in a continuous period of time that is cut with the day shift (midnight) then the time count continues and if the alarm period is finally exceeded then the day in which the time count was completed is displayed with day alarm indicator and the time exposure split appropriately over the two days.

2. The duration values above or below the specified High/Low temperature are always displayed. Presence of a day alarm trigger marker means that exposure to an alarm temperature for a continuous period greater than the configured trigger duration has occurred on that day.

## Stopping the recorder

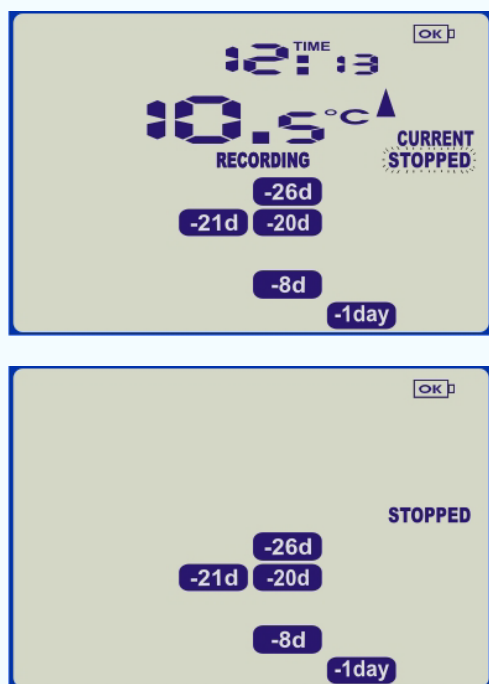

 Press and hold the STOP button.

The STOPPED icon will flash.

Wait for the flashing to stop then release the STOP button within 2 seconds to stop recording.

Note that for this function to operate it needs to be enabled in the *Configure TRED - Advanced Options* configure dialogue.


Allow logging stop with STOP button


### Note

If an ALARM is present (and the clear alarm by pressing STOP button function is enabled) then it will need to be cleared first before being able to stop the recorder.

## Resetting the recorder back to *Ready* state


Once the recorder is back in *READY* state, recording can be restarted.

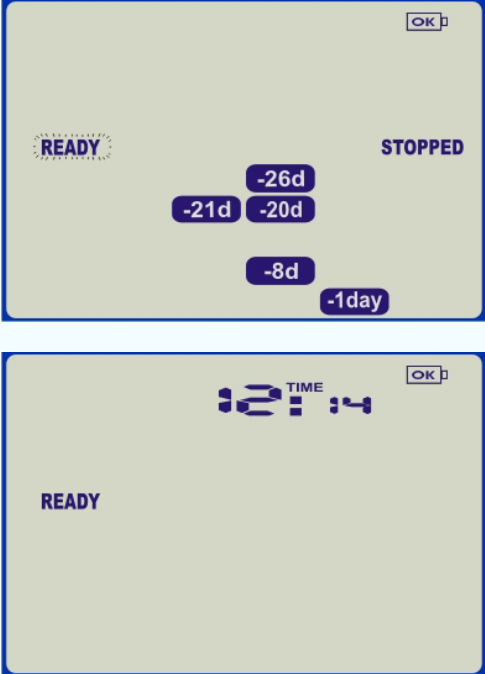

 Press and hold the START button.

The READY icon will flash.

Wait until for the flashing to stop then release the START button within 2 seconds to revert the recorder to READY state.

 **Note that all recordings and statistics are lost**

Note that for this function to operate it needs to be enabled in the *Configure TRED - Advanced Options* configure dialogue.

Allow restart of logging with START button

## Paused function


The recorder can be configured to suspend processing of readings for alarms and max/min statistics for a period of time after button press activity.

This allows the user to review the current statistics or clear an alarm without causing a false alarm or statistic while handling or re-positioning the external probe.

The delay is expressed in multiples of logging interval and is set in the *LogTag Analyzer Configure TRED - Advanced Options* configure dialogue.

Pause alarm/statistics processing for  readings when button pressed (20 Minutes)

Paused processing is indicated on the display by the PAUSED icon being present as shown in the display example below :-

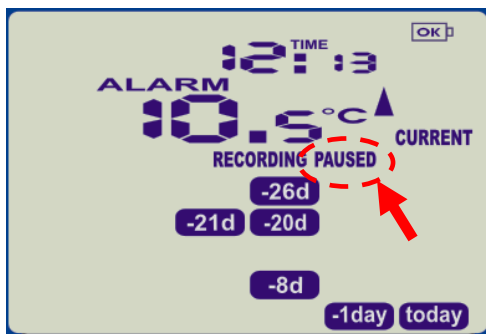

### Note

Data logging continues but each log that is taken during the paused period is flagged and labelled as paused. Logs that are flagged as 'paused' are not used in the summary statistics.

## Power save mode

When Power save mode is enabled the display will automatically switch off after 30 seconds of no button activity.

The recorder uses significantly less battery power with the display off (typically to around 1/3 of the average power with the display on).

This function is appropriate in applications where the current temperature display is not required to be often seen such as a transit monitoring application.

Press any button to cause the display to re-activate.



The power save mode is enabled or disabled via LogTag Analyzer software configuration function *Configure TRED - Advanced Options* dialogue.

Switch off display after 30 seconds (Power save)



## Adjusting the display clock


The display clock of the recorder can be set to the correct time zone either by using *LogTag Analyzer* software or directly using key actions on the recorder itself.


The clock can be adjusted to local time by pressing the  and  buttons together continuously for a period of 8 seconds.


During this button press period **CLOCK ADJ** icon flashes. Release the buttons when the flashing stops to enter clock adjustment mode.


The display then changes as shown in the example below with the minutes digits flashing.


In the example below the hours is 18 and the minutes is 38:-



Press the  button to increment the minutes digit (rolls back to '00' after '59' with multiple presses).

Press the  button to accept the minutes value and the display then flashes the hours value.

Press the  button to increment the hours value digits (rolls back to '00' after '23').

Press the  button to accept the hours value and the display then reverts to the normal display.

**NOTE:** It is advised that the real time clock Hours is only adjusted when in STOPPED or READY modes (i.e not recording) to avoid large shifts in day boundary data.

If a display clock adjustment is made while in *RECORDING* mode then the next log taken records a flag indicating a time change took place.


Changes to the display clock do not affect the internal real time UTC+timezone offset value so the logged data does not experience time gaps.



## Hibernation

When hibernated, the recorder's power consumption falls nearly to zero and the battery life approaches the shelf life of the battery (typically 5+ years).


This state is useful for conserving battery life during periods of non use.

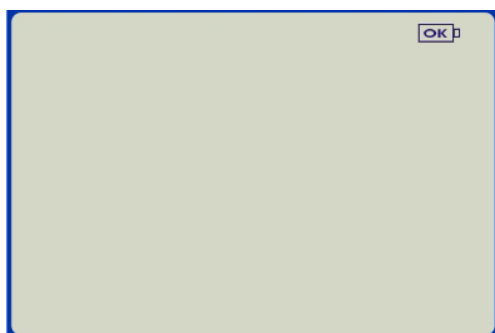A hibernated recorder has no active display however a button press will wake the recorder up and it will display just the battery status for a few seconds then revert back to display off.



A hibernated recorder can be placed into the Ready state by pressing the  and  buttons together continuously for a period of 6 seconds.

During this button press period the READY icon flashes. Release the buttons when the flashing stops to enter *READY* state.

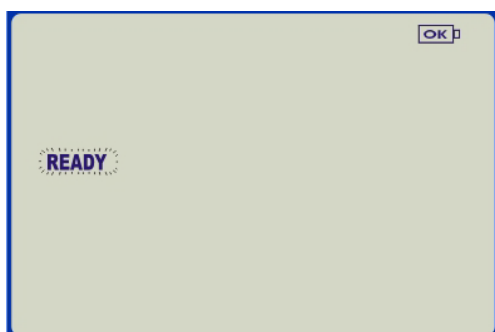

Recorders can only be placed into Hibernation with *LogTag Analyzer*.

### Note

The real time clock is not running in a hibernated recorder and must be setup once hibernation is manually exited to the *READY* state (see 'Adjusting the display clock').

## Total summary days collected


The recorder can be setup to show the Total number of days collected. This is shown on both the *Recording* and *Stopped* status screens.

The total number of days collected can be enabled in LogTag Analyzer *Configure TRED - Advanced Options* configure dialogue.

Show total summary days collected



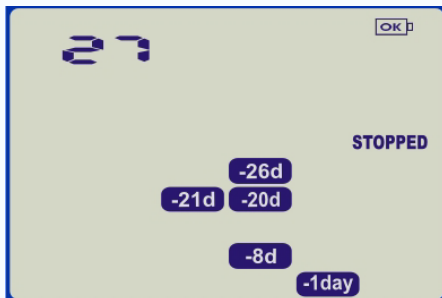


*RECORDING* status showing '13' days of data has been collected.



*STOPPED* status showing '27' days of data has been collected.

## Specifications


<b>LogTag® Part codes</b>	TRED30-7R : (replaceable battery) TRED30-7F : (fixed battery)
<b>Measurement Temperature Range with ST100 remote temperature probe</b>	-40°C ~ +99°C (-40°F ~ +210°F)
<b>Recorder operating temperature range</b>	-30°C ~ +60°C (-22°F ~ +140°F)
<b>Rated Temperature reading accuracy</b>	Better than ±0.5°C (±0.9°F) for -20°C~+40°C (-4°F~+104°F) - <i>typically ±0.3°C (0.6°F)</i> Better than ±0.8°C (±1.4°F) for -40°C~+20°C (-40°F~ -4°F) - <i>typically ±0.5°C (0.9°F)</i> Better than ±0.8°C (±1.4°F) for +40°C~+70°C (+104°F~+158°F) - <i>typically ±0.7°C (1.3°F)</i> Better than ±1.2°C (±2.2°F) for +70°C~+99°C (+158°F~+210°F) - <i>typically ±1°C (1.8°F)</i> .
<b>Rated temperature resolution on LCD</b>	0.1°C(0.2°F) for measurements -40°C ~ +50°C (-40°F ~ +122°F) 0.2°C(0.4°F) for measurements +50°C ~ +70°C (+122°F ~ +158°F) 0.3°C(0.5°F) for measurements +70°C ~ +80°C (+158°F ~ +176°F) 0.4°C-0.6°C(0.7°F~1°F) for measurements +80°C~ +99°C (+176°F ~ +210°F)
<b>Recording Capacity</b>	Data logging memory : 7770 logs (eg 53 days @ 10min logging, 80 days @ 15min logging) Day summary statistics memory (for display on LCD): up for 30 days of Max/Min and duration values
<b>Sampling Interval</b>	configurable from 30 seconds to hourly
<b>Logging modes</b>	Supports 'continuous' wrap around or specific recording period
<b>Read time clock accuracy</b>	Quartz crystal locked real time clock. Rated accuracy ±25ppm @ 25°C (equiv to ±2.5 seconds/day) Rated temperature coefficient is -0.034±0.006ppm/°C (i.e typically +/- 0.00294seconds/day/°C)
<b>Download Time</b>	Typically less than 6 seconds for full memory
<b>Power source</b>	3V Lithium-Manganese Dioxide extended temperature chemistry
<b>Battery life</b>	TRED30-7R : typically 1 year of operation TRED30-7F : typically 2+ years of operation
<b>Size</b>	93mm(H) x54.5mm(W)x8.6mm(T) (without temperature probe)
<b>Weight without temperature probe</b>	TRED30-7R : 41grams, TRED30-7F : 44grams
<b>Case Material</b>	Polycarbonate
 <b>EMC Compliance</b>	Complies with EC EMC directives (EN50081-1:1992 & EN 61000-6-1:2001) Complies with FCC Part 15 Subparts A and B.
<b>Environmental</b>	IP61 (when vertically mounted or hung)
<b>FDA 21CFR Part 11 Compliance</b>	Designed to comply with FDA 21CFR Part 11 (Digital signatures)
<b>Reader Interface</b>	Standard LogTag Interface Cradle
<b>Remote Temperature Probes</b>	Standard LogTag® ST100 temperature probes (standard lengths 1.5m (4'11") or 3m (9'10"))
  <b>RoHS</b>	Manufactured to meet the European RoHS Directive

## LogTag<sup>®</sup> Remote Probe Options

The LogTag<sup>®</sup> TRED30-7 is designed and calibrated for use with a LogTag<sup>®</sup> ST100 remote temperature probe. Only this probe is compatible with TRED30-7 and using any other probe type is likely to cause an error in readings.

### Identifying an ST100 probe

The ST100 probe is distinguished from other LogTag<sup>®</sup> remote temperature probe types by the blue sleeve blue body at the plug end of the probe cable.

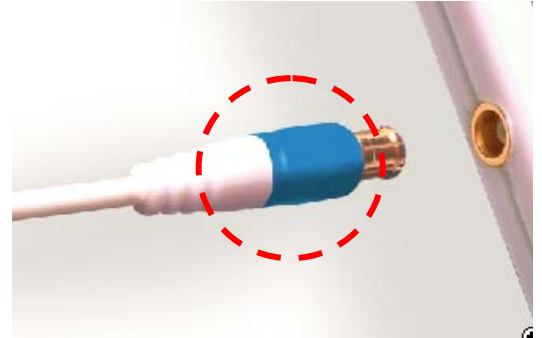

### Short tipped probe



Part#s ST100S-15 (1.5m) and ST100S-30 (3.0m)

The tipped probe incorporates a 30mm exposed length of 5mm OD 316 stainless probe without handle but with small over mold to improve resistance to moisture and provide cable strain relief. All materials at probe end of cable are FDA food rated including the cable. Supplied standard (part# ST100S-15) with 1.5m (4'11") or 3.0m (9'10") cable terminated to MCX plug for plugging into LogTag<sup>®</sup> TRED30-7.

### Long tipped probe



Part#s ST100T-15 (1.5m) and ST100T-30 (3.0m)

The tipped probe incorporates a 140mm exposed length of 5mm OD 316 stainless probe without handle but with small over mold to improve resistance to moisture and provide cable strain relief. All materials at probe end of cable are FDA food rated including the cable. Supplied standard (part# ST100HT-15) with 1.5m (4'11") or 3.0m (9'10") cable terminated to MCX plug for plugging into LogTag<sup>®</sup> TRED30-7.

## Handled probe



Part#s ST100H-15 (1.5m) and ST100H-30 (3.0m)

The standard handled probe incorporates a 70mm long shaped overmolded handle with a 105mm length 5mm OD (slightly greater than 3/16") 316 stainless probe. All materials at probe end of cable are FDA food rated including the cable.


Supplied standard (part# ST100H-15) with 1.5m (4'11") or 3.0m (9'10") cable terminated to MCX plug for plugging into *LogTag*<sup>®</sup> TRED30-7.

## Bare probe

Bare sensor without stainless sheath ready for fitting to custom probe assembly.

Not rated for food contact or environmentally rated.

Supplied standard (part# ST100B-15) with 1.5m (4'11") or 3.0m (9'10") cable terminated to MCX plug for plugging into *LogTag*<sup>®</sup> TRED30-7.

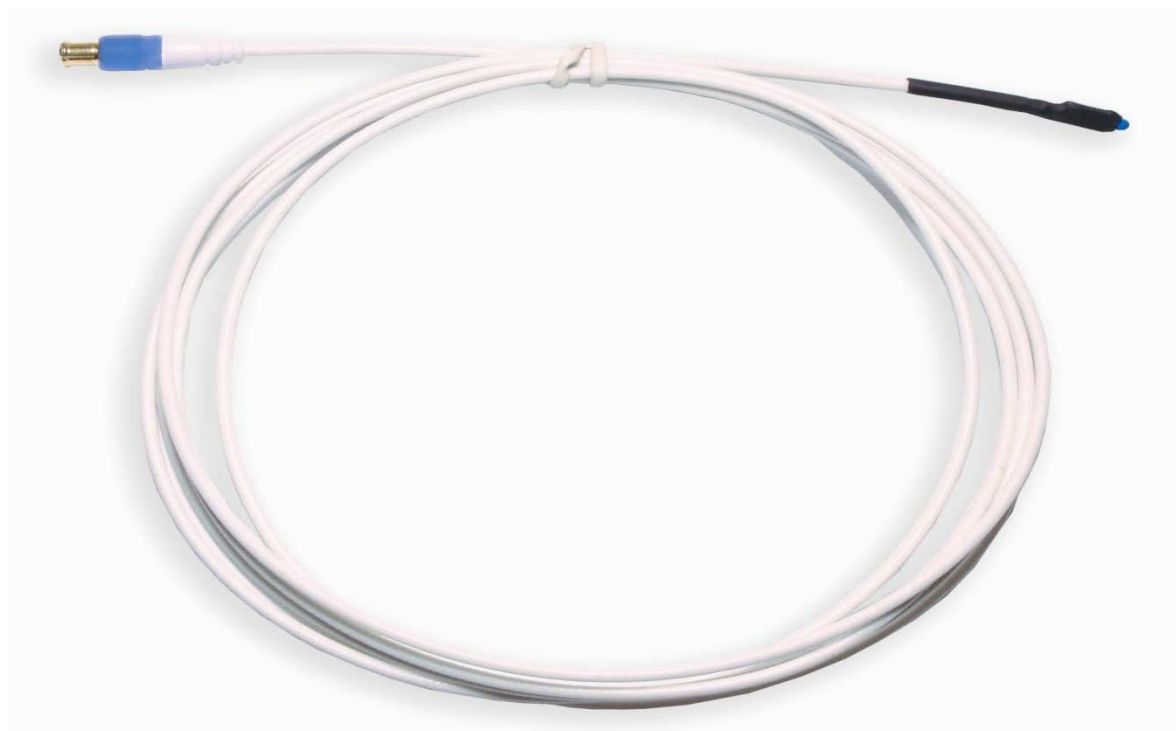

Parts# ST100B-15 (1.5m) and ST100B-30 (3.0m)

NOTE: *LogTag*<sup>®</sup> ST100 sensors are designed and calibrated for interchangeability with TRED30-7 loggers to the standard rated accuracy of the product. If a TRED30-7/ST100 probe combination is calibrated to a higher level of accuracy (as is possible) then care should be taken to always use the same TRED30-7/ST100 combination for measurements as the ST100 sensor is not rated interchangeable at accuracies better than the TRED30-7/ST100 rating in this specification.

NOTE: INFORMATION AND SPECIFICATIONS SUBJECT TO CHANGE

LogTag Recorders Ltd reserves the right to change this product's specifications without notice.

Copyright © 2011, LogTag Recorders Limited. All Rights Reserved

*LogTag*<sup>®</sup> is a registered trademark of Logtag Recorders Ltd